

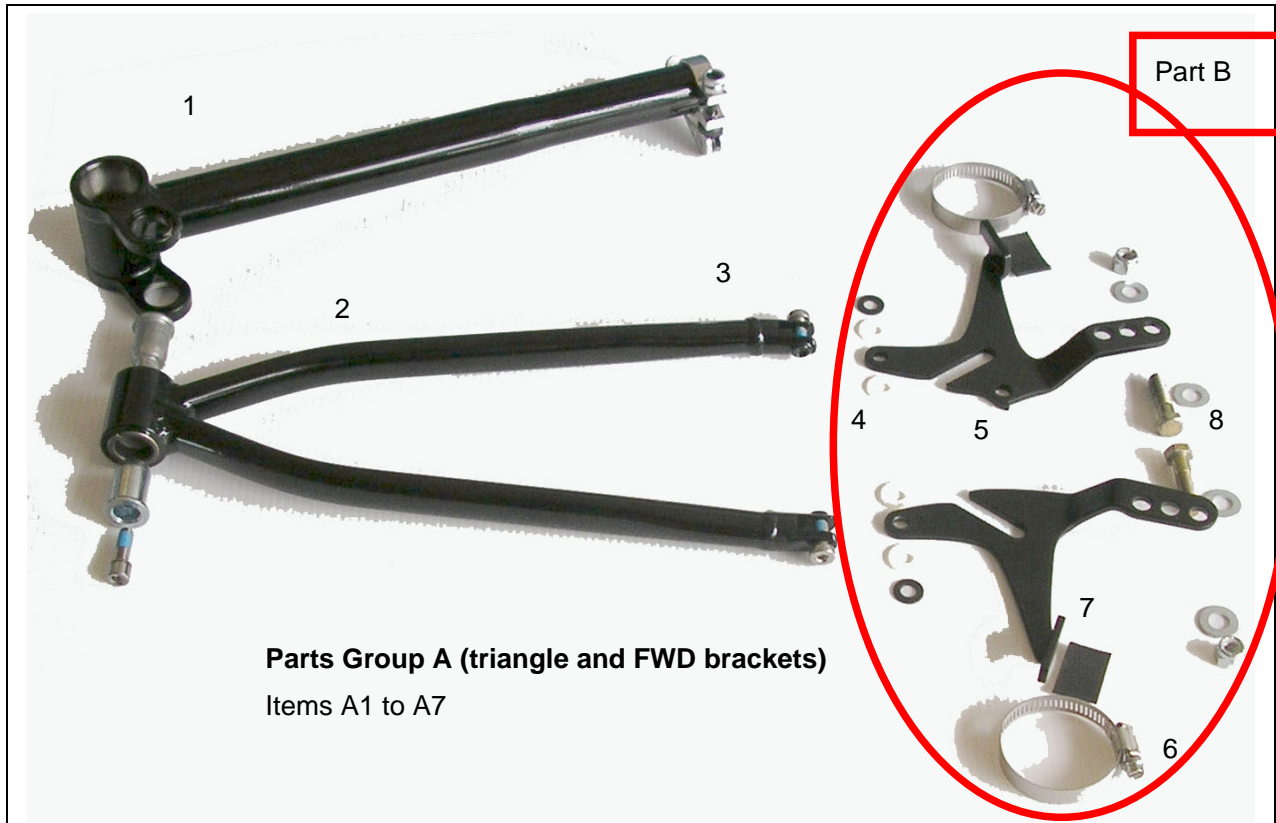
1. Cruzbike Conversion Kit Instructions

These instructions are for people who purchased the Cruzbike Conversion Kit and who are going to convert a regular mountain bike into a Cruzbike. If you purchased a complete bike, please disregard this chapter.

Read the entire fitting instructions before starting.

Included Parts – Cruzbike Kit

Tick off the following parts, do any subassembly needed to prepare the items as pictured:



Parts Group A (triangle and FWD brackets)
Items A1 to A7

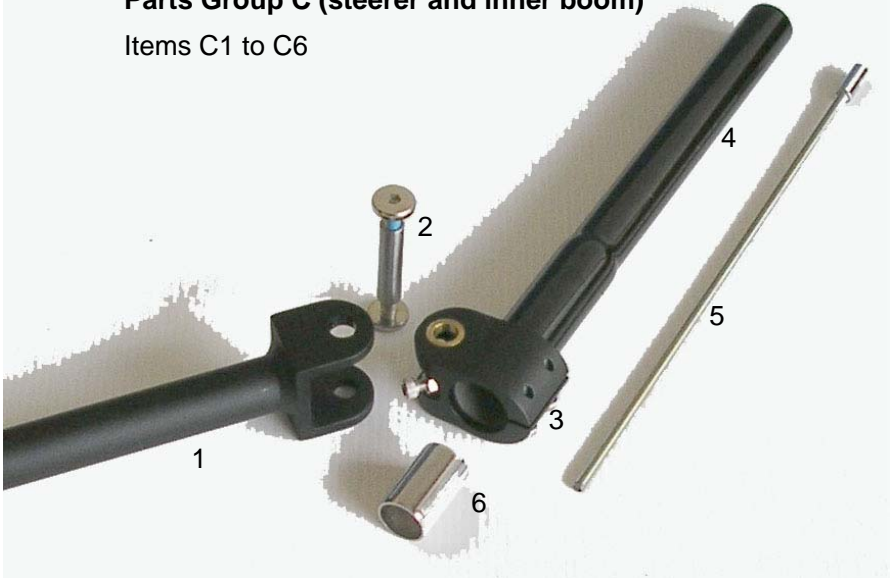
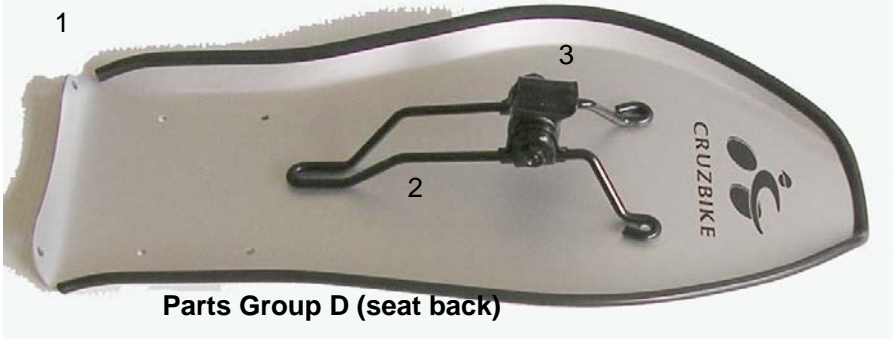
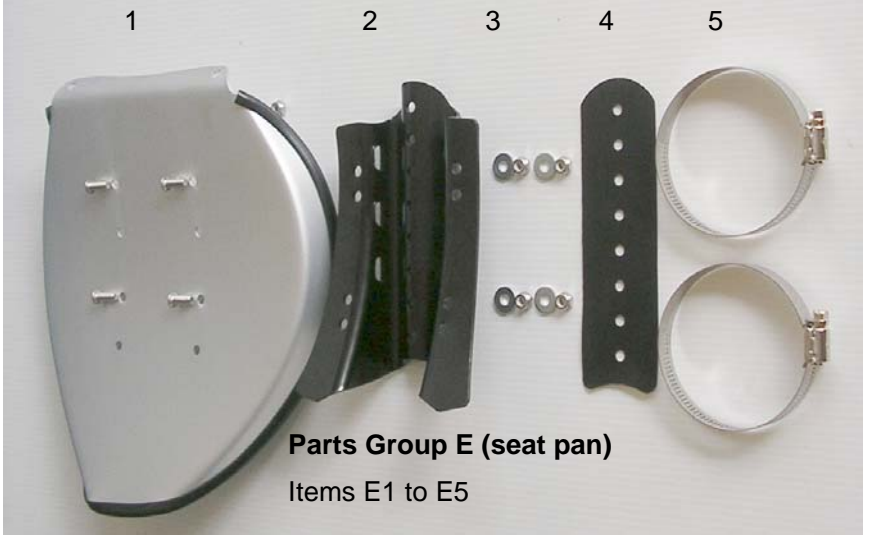

1. Telescoping Front Tube (TFT) Sleeve with Quick Release Clamp;
2. Chainstay with bushings inserted and three piece bolt.
3. Chainstay fixing bolt
4. 2 nylon washers, 1 steel washer x 2
5. Triangle brackets, Left and Right, with
6. Ring Clamps x 2;
7. Rubber Pads x 2;
8. Fork dropout bolt, 2 washers, one nut x 2

Part B



Parts Group B (front to rear axle)
Item B1

1. Rear axle to fit the original front wheel into the rear dropouts

<p>Parts Group C (steerer and inner boom) Items C1 to C6</p> 	<ol style="list-style-type: none"> 1. TFT Arm; 2. Dowel Pin and 2 bolts; 3. Pivot Clamp with bushings inserted and with Safety Bolt fitted; 4. Steerer Extension Tube; 5. Ahead Tensioning Bolt Extension; 6. Insert collar
 <p>Parts Group D (seat back) Items D1 to D3</p>	<ol style="list-style-type: none"> 1. Seat Back; 2. Seat Rail and Binding Clamp; 3. Binding Clamp; 4. Bolts washers nuts x 3;(not shown) 5. Bolt, nut, grommet, pair of washers x 2 (not shown)
 <p>Parts Group E (seat pan) Items E1 to E5</p>	<ol style="list-style-type: none"> 1. Seat Pan; 2. Seat Mount; 3. Bolt, washer nut x 4; 4. Rubber Strip; 5. Ring Clamps
 <p>Parts Group F (misc bushings) Items F1</p>	<ol style="list-style-type: none"> 1. bushings to fit the sofrider fork (not required for conversions)